

DSTV Decoder – Spirit Word Channel

Go to [Menu] -> [Advanced Options] -> [Dish Installation (Pin = 9949)]
Change [Network 2] to [Other or DStv IS7 or DStv W4] and press [OK]

Enter [Frequency: 12682, Symbol Rate: 26657, FEC: ½, Polarization: Horizontal, Use NIT: Yes]

Go to [Accept all displayed values and leave screen]

Change [Network 3] to [Other] (*Default frequency should be 11170, 26652, 5/6 Vertical)
[Scan all networks]

Press [TV] -> [Public IS 7/10]


DSTV Decoder – Detailed Tuning Instructions [[PDF](#)] – [VIDEO](#) 

*Spirit Word is FREE on DSTV Decoders - NO DSTV contract required!

These instructions can be used on the following DSTV decoder models: DSD 110, 660, 910, 990, 1110, 1131 and newer...

Note: Most PVR decoders are designed for INTELSAT 7 only and will not work properly when using these instructions.

1. Use your decoder remote and press [Menu]
2. Then use the arrow keys on the remote to go to [Advanced Options] and press [OK]
3. Now go to [Dish Installation] and press [OK]
4. Enter the following pin code [9949] to proceed
5. Scroll down to [Network 2] and use your right arrow button key until the word [Other] appears then press [OK] *Note: For decoders like (DSD 110) you can select [DStv IS 7 or DStv W4] instead of [Other]*

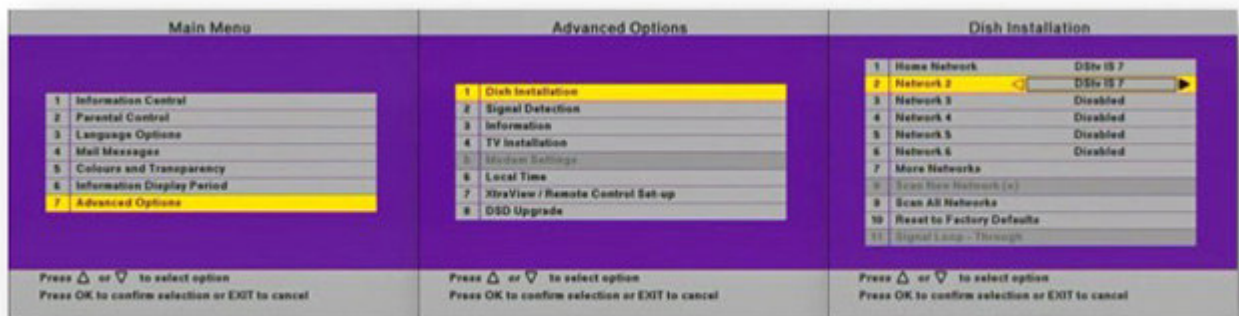

6. Now scroll down to [Frequency], press [OK] and enter 12682 and press [OK] again when finished.
7. Similarly, change the [Symbol Rate] to 26657 and press [OK]
8. For [FEC], select ½ by using left arrow on your remote
9. Set [Polarization] to Horizontal and [USE NIT] to Yes
10. Ensure that your settings correspond to the values shown below and wait +-10 seconds for the signal strength/quality to update.

Channels available on these frequencies:

**(Updated 24-03-2010)*

Frequency:	ViewAfr, Daystar, Spirit Word , TKC, 3ABN, MFM, Eden
12682 –or- 12562	Life, Emmanuel TV, DCLM, Chosen, Omega, CVV, Faith
Symbol	TV, DBN, Press TV, Novo Tempo, ACBN, NourSat, Dove,
Rate: 26657	KICC TV, Champions of Fire
FEC: 1/2	
Polarization: Horizontal	
Use NIT: Yes	

Note: If the signal strength is 0% you might have a problem with the decoder LNB settings which will be explained below. If the signal strength is below 70%, you might need to check if you have the correct dish size recommended with your LNB type or you might need to get your local installer to check your dish alignment again.

11. To continue, select [Accept all displayed values and leave screen] and press [OK]

**Additional/Optional Settings*

The settings entered in the steps above enables you to view the Spirit Word channel among other FREE channels, however; You can add more FREE channels by completing steps 12 to 14, otherwise proceed to step 15.

12. Scroll down to [Network 3], change it to [Other] and press [OK]


13. Ensure that your settings correspond to any of the following settings.

Channels available on these frequencies:

**(Updated 22-02-2010)*

Frequency: 11170	
–or- 12722	Learn, Health, Maranatha, Kruiskyk, Ezekiel TV
Symbol Rate:	F24, God TV, ASTV
26652 26657	CTV, CNBC, Hope, Divine, WRS
FEC: 5/6 1/2	
Polarization: Vertical Vertical	
Use NIT: Yes Yes	

14. Select [Accept all displayed values and leave screen] and press [OK]
15. Now select [Scan all networks] and press [OK]

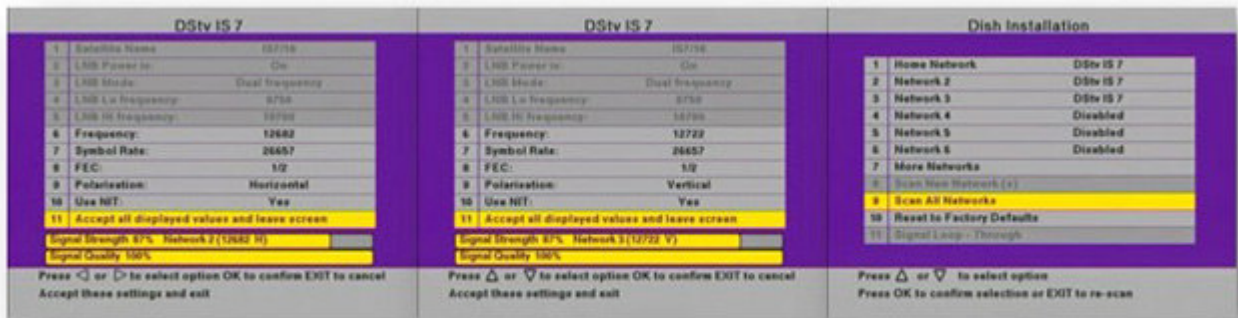

After scan has completed, press the [TV] button on your remote and select [Public IS 7/10] and press [OK]
 Look for a channel named "Spirit Word" or "Spiri" or "SWC". If you are not able to receive the above mentioned channels yet, first recheck your settings again and rescan one more time... Alternatively, see the Troubleshooting and Technical Info section.

To return to normal DSTV Bouquet (Multi-choice Channels) after viewing Spirit Word, simply press the [TV] button on your remote and select [DSTV]...



DSTV Decoder - Factory Reset [\[VIDEO\]](#)

Note: This option is not recommended on PVR or dual view (any smart/multi view) decoders since it may reset other settings that only qualified DSTV installers can setup again. These decoders will have "Personal" and "Technical" reset options where the "Technical" reset will turn off additional remotes and settings configured for Multi-

view...

1. Press [Menu]
2. Go to [Advanced Options] and press [OK]
3. Go to [Dish Installation] and press [OK]
4. Enter pin [9949] and press [OK]
5. Go to [Reset to Factory Defaults] and press [OK]